

How-to TILE

PREPARING FOR TILING



Before you start your tiling project, surfaces need to be firmly fixed, primed and dry; floors may need to be levelled or repaired, and wet areas will need to be waterproofed. Clean off dust, oil, grease and all loose contaminants. Prime porous surfaces with DUNLOP PRIMER AND ADDITIVE.

TILE ADHESIVE SELECTOR

WALL TILING ADHESIVE SELECTOR

	Indoor	Outdoor	Concrete / Sand-Cement Render	Plasterboard / FC Sheet	Existing tiles (removed glaze)	Wet Areas (over waterproofing)	Metal (prime with a metal primer)	Existing tiles (glazed, no grinding)	Roughened Fibre-glass
WALL TILE ADHESIVE	■		■	■					
WALLFIX TILE ADHESIVE ★	■		■	■					
PREMIXED MASTIC ★	■		■	■		■ [^]			
MULTIPURPOSE MASTIC	■	■	■	■	■ [*]	■			
WALL & FLOOR TILE ADHESIVE ★	■	■	■	■	■ [*]	■	■		
UNIVERSAL TILE ADHESIVE	■	■	■	■	■ [*]	■			
TRADE RESAFLEX	■	■	■	■	■ [*]	■			
PREMIXED RESAFLEX	■		■	■					
RAPIDFLEX	■	■	■	■	■ [*]	■			
TILE-ALL	■	■	■	■	■	■	■	■ [*]	■ [#]

★ STAR PICK!
Non-Slump, High Grab

* Indoor only ^ Porous tiles # Swimming Pool Waterline only

FLOOR TILING ADHESIVE SELECTOR

	Indoor	Outdoor	Concrete / Sand-Cement Screed	Compressed FC Sheet	FC Sheet (over timber floors)	Existing tiles (removed glaze)	Wet Areas (over waterproofing)	Existing tiles (glazed, no grinding)	Vinyl (suitably prepared)	Timber (suitably prepared)
FLOOR TILE ADHESIVE	■	■	■	■			■			
TRADE RESAFLEX ★	■	■	■	■		■ [■]	■			
PREMIXED RESAFLEX	■				■					
RAPIDFLEX	■	■	■	■		■ [■]	■			
WALL & FLOOR TILE ADHESIVE ★	■	■	■	■	■	■ [■]	■		■	■
MULTIPURPOSE MASTIC ☆	■	■	■	■		■ [■]	■			
UNIVERSAL TILE ADHESIVE	■	■	■	■		■ [■]	■			
TILE-ALL	■	■	■	■	■	■	■	■ [*]	■	■
SUPER TILESET	■	■	■	■		■ [■]	■			
FLOORFIX TILE ADHESIVE	■	■ ⁺	■							

★ STAR PICK!
Excellent Value & Multipurpose


* Indoor only, + Covered ■ Excluding wet areas

STEP BY STEP TILING

Before beginning any tiling project, read the packaging carefully and ensure the surface has been prepared properly.


Step 1

If the adhesive is not premixed, mix the adhesive according to instructions on the packaging by adding powder to water.

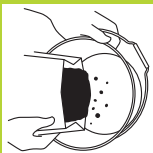

Step 2

Apply the adhesive to the surface using a suitable notched trowel. As a general guide, use a 6mm notch trowel on walls and a 10mm notch trowel on floors.

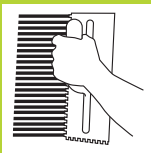


Step 3

Press and slide the tile into position ensuring the back of the tile is in good contact with the adhesive.



Step 4

Remove any surplus adhesive from the face and between joints of the tile before it sets.

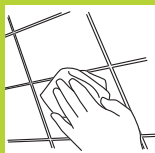

To complete your tiling project, use DUNLOP COLOURED GROUT that complements your tiles as well as the matching DUNLOP COLOURED SILICONE. Grout joints can be sealed with DUNLOP GROUT SEALER.



Toll Free Hotline
1800 222 841 (AU)
0800 224 070 (NZ)
www.dunlopdiy.com

ARDEX Australia Pty Ltd
 1300 788 780 (AU)



Want more info?
 Use the QR reader
 on your smartphone
 to view DIY video.



9 315021 022568

